



Mounting sidestreamers Volvo FH (Type 4) H1 – H2 – H3

April 2019 Doc V0003 Version 001

Veap Shield United, Einsteinstraat 1, 6669 NC Dodewaard, +31 (0)488-482554 veap.nl

Mouting Side streamers Volvo FH (Type 4) H1 – H2 – H3

Drill at the center points of the sheet metal a hole 12 mm (behind the sheet metal part are threaded inserts) Protect against corrosion

If necessary, mount a rubber ring behind the skirts to create more space at the front

Mount:

Washer M8
Bolt M8 x 25

Drill a hole and fix the two parts with:


2x Bolt M6x30
4x Washer M6
2x Locking Nut M6

Mount Original bolts

Right side of vehicle



*Lees voor het gebruik van deze producten de veiligheidsvoorschriften goed door!!!
Read the safety instructions carefully before using these products!!!*

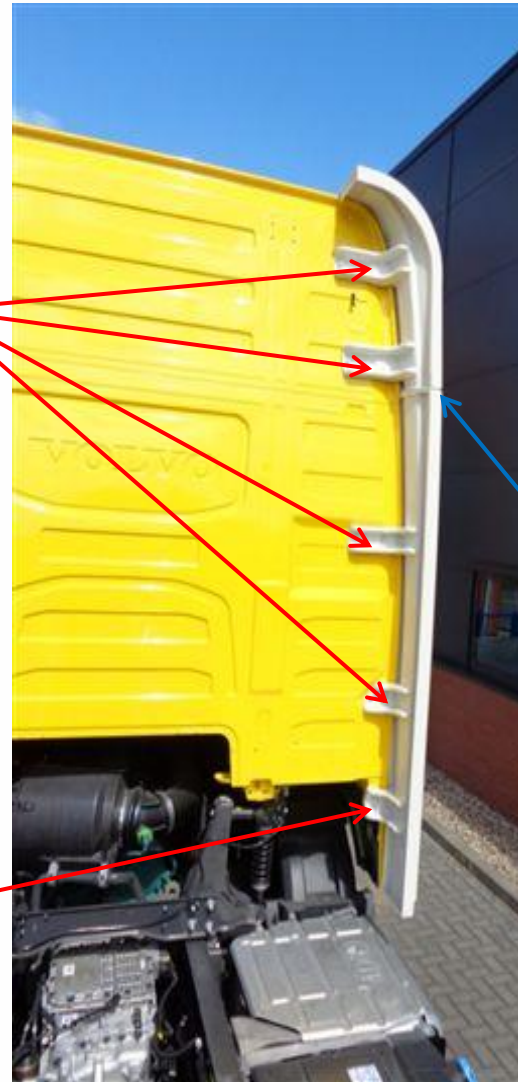

Mounting Side streamers Volvo FH (Aanbrengen boven spoiler / Mounting top spoiler)

Drill at the center points of the sheet metal a hole 12 mm (behind the sheet metal part are threaded inserts) Protect against corrosion
If necessary, mount a rubber ring behind the skirts to create more space at the front

Mount: Washer M8
Bolt M8 x 25

Quantity	Description
4x	Bolt M6x30
20x	Bolt M8x25
4x	Locking nut M6
8x	Fender washer M6
20x	Fender washer M8
6x	Rubber washer M8 (spacer)

Fix the two parts with:
2x Bolt M6x30
4x Washer M6
2x Locking Nut M6

Mount Original bolts

Left side of vehicle

